 


REMOTE CONTROLLER OPERATION MANUAL

External View of Remote Controller

Remote Controller function description

This remote Controller is a general remote Controller, and some functions are valid according to the adaptable model.

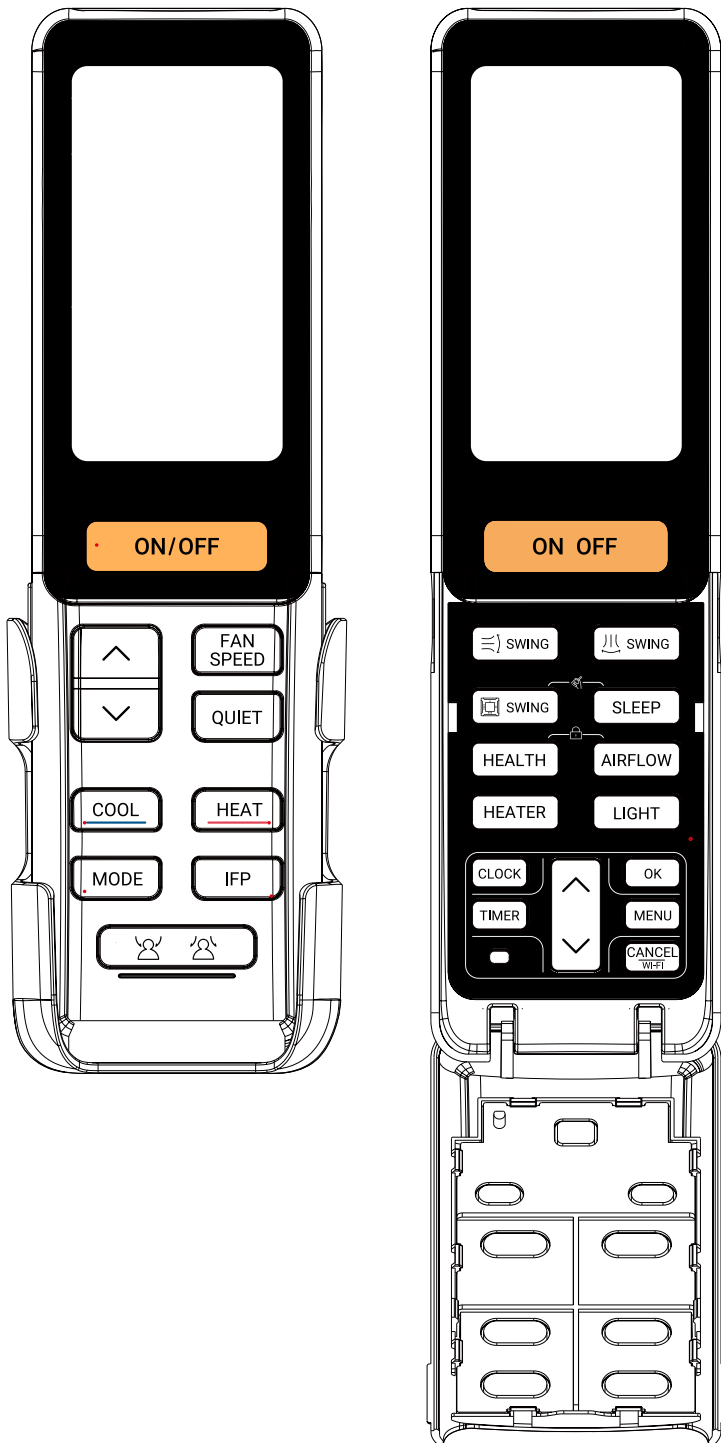


Functional description

1.ON/OFF Button:


Turning on the units: Press the  button to turn on the units.

Note: The initial default operation mode is AUTO and then will display the mode before turning off

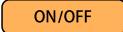
Press  button again to turn off the unit.

 
2. temperature +/- Button:

(1) This button is invalid in FAN mode;

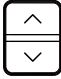(2) Press  button once, temperature will increase or decrease by 0.5°C; pressing and holding the button will make the temperature change quickly.

3. FAN SPEED Button:

Press the  button, the cycle sequence is as follows:

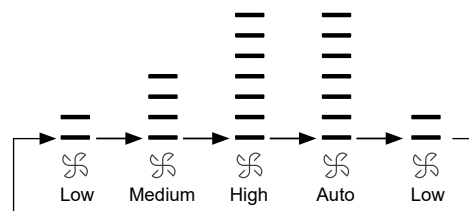

4. QUIET

Press  button, the controller screen will display " QUIET "

. The fan speed in Quiet function is automatic fan speed, but the specific fan speed grade in auto depends on indoor unit.

Note: This function is valid under the mode of COOL and HEAT.



5. COOL/ HEAT



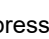
Press  button and  button to execute COOL mode and HEAT mode .




6. MODE

Press the  button every time, the cycle sequence is as follows:  →  →  →  →  → 

7. IFP/

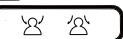(1) Press  button, display "IFP", IFP function is set, and press  button again to cancel.

 
(2) Press  button, display  that expresses following; press it again, display  that expresses evading. Press it the third time to cancel this function.

(3) Airflow angle will adjust automatically along with the location of people. At the same time, ,  and  will disappear.

 
8. Up-and-down SWING Angle

Each time you press the button , Remote control display cycle sequence:

HEAT MODE:

 


Other modes:




 
9. **Right-and-left SWING Angle adjustment**


Each time you press the button  , the remote control will display the following cycle:



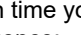

10. **Round-way cassette swing angle adjustment**

Each time you press the button  , Remote control display cycle sequence:



When pressing  button to select blade, the selected blade flashes. Press "Up-and-down Angle" button to adjust airflow angle of the selected blade.



11. SLEEP

Press the  button, and the remote controller screen will display "Sleep". The SLEEP time is fixed to 8 hours and is not adjustable. Press the  button again, and the sleep function will be cancelled.


Note:


- (1) Sleep function is invalid in FAN mode.
- (2) Sleep function is only valid during the units turning on.

12. HEALTH


- (1) When the controller is switched on, press  button, health function is activated and the remote controller will display "HEALTH".
- (2) When the controller is turned off, press the  button, the controller will be turned on, enter FAN mode and display "HEALTH".
- (3) If the Health function is set and activated, Press Health button will cancel this function.


13. Health AIRFLOW

Press the  button and the remote controller screen displays "AIRFLOW".

Press  again to cancel this function.


14. HEATER


Press the  button, and the remote controller will display "HEATER".

Press  button again, the "HEATER" on the remote controller will disappear, and the HEATER function will be turned off.


Note: Heather function is only valid in AUTO and HEAT mode.

15. LIGHT

Press the  button to activate the light function.

Press the  button again, and the light function is off.

16. CLOCK

Press the  button, the time displayed on the remote controller


flashes. Then Press the  button once, the time increases or


decreases by one minute. Holding the button will quickly increase or decrease the time.

To complete the set time, press  /  button again to confirm.


17. TIME

(1) When the controller is on, you can only set the TIMER OFF. And when the controller is off, you can only set the TIMER ON.


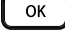
When the remote controller is off, press the  button to enter the TIMER ON adjustment state.

Press the  button under the starting state of the remote control to enter the TIMER OFF adjustment state.


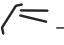
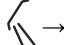
When entering the timing adjustment process, timer ON/OFF icon and clock flash at the same time, the initial default value is:

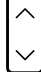

12:00. Press the  button once to increase or decrease the time

by 1 minutes, pressing and holding the button will speed up the adjustment.


After the time adjustment is completed, press the  /  button again to confirm. Then the time will statically display, and start the countdown.

18. MENU

Press the  button, Functional cycle is as follows: TURBO → FRESH → IFP AC OFF → IFP AC ECO → 3D AIR(reserved) →  →  → 10°C heating (Only valid in HEAT mode) → °F / °C → TURBO

- 1. Press  button, the current function to be set flashes;
- 2. Press  button again to set/cancel the current setting function in the above sequence. If there is no operation in 5 seconds, it will exit automatically.

19. Wi-Fi Configuration

Press  button 3S to enter Wi-Fi configuration, remote controller displays COOL mode, LOW fan speed and 30°C. Or you can enter the Wi-Fi configuration through setting Cooling mode, Low fan speed and 30°C.




20. SELF-CLEAN




Press the combined button  and  , and the remote controller will display "SELF-CLEAN".

Press  button or  button to exit the self-cleaning function.

Note: The "SELF-CLEAN" function is invalid under "SLEEP" function and "TIMER" function.

21. LOCK

Press the combination key button  and  , and the remote controller screen will display "  ". All buttons on the remote control are invalid.

Press the combination button  and  again to cancel the lock, "  " disappear. All buttons on the controller will restore to be valid.